

## Door Handle

### Removing


- Pull off door seal -1- in area of door handle.

Pull door handle -2- in direction of -arrow- and hold in this position. Remove bolt -4- up to stop using Socket wrench -T10011- (-T10072-). Housing is loosened by doing so.




#### Note


If bolt has been loosened too far, this may cause lock mechanism ring to loosen from mounting bracket and fall into door.

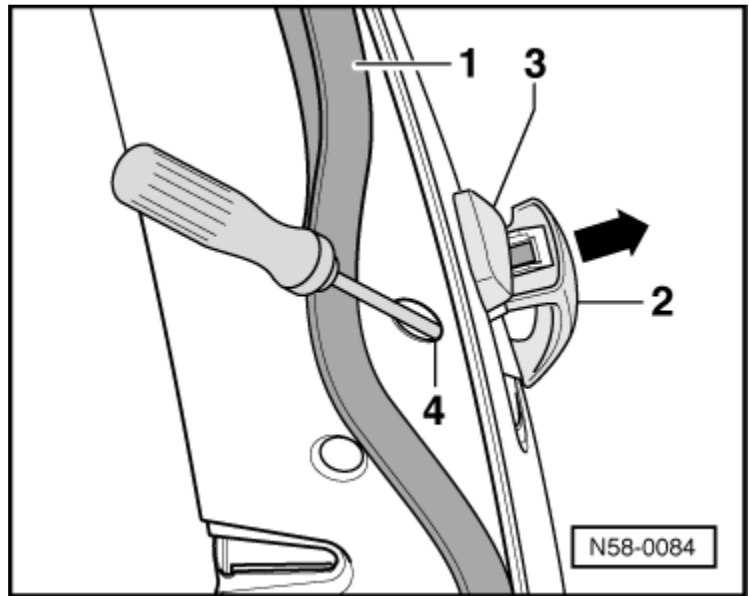

- Remove housing -3- at right angle to door from door handle mounting bracket.
- Unclip clip -1- from door handle.
- Swivel out door handle from door.

### Installing

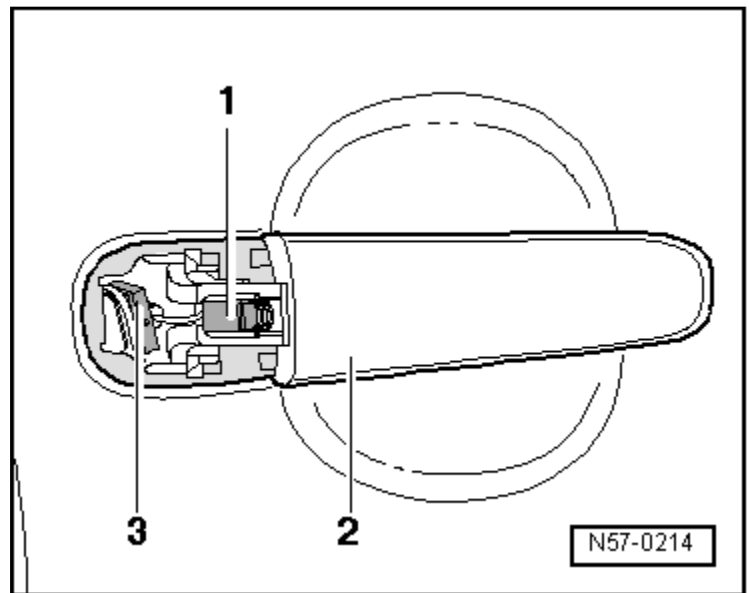

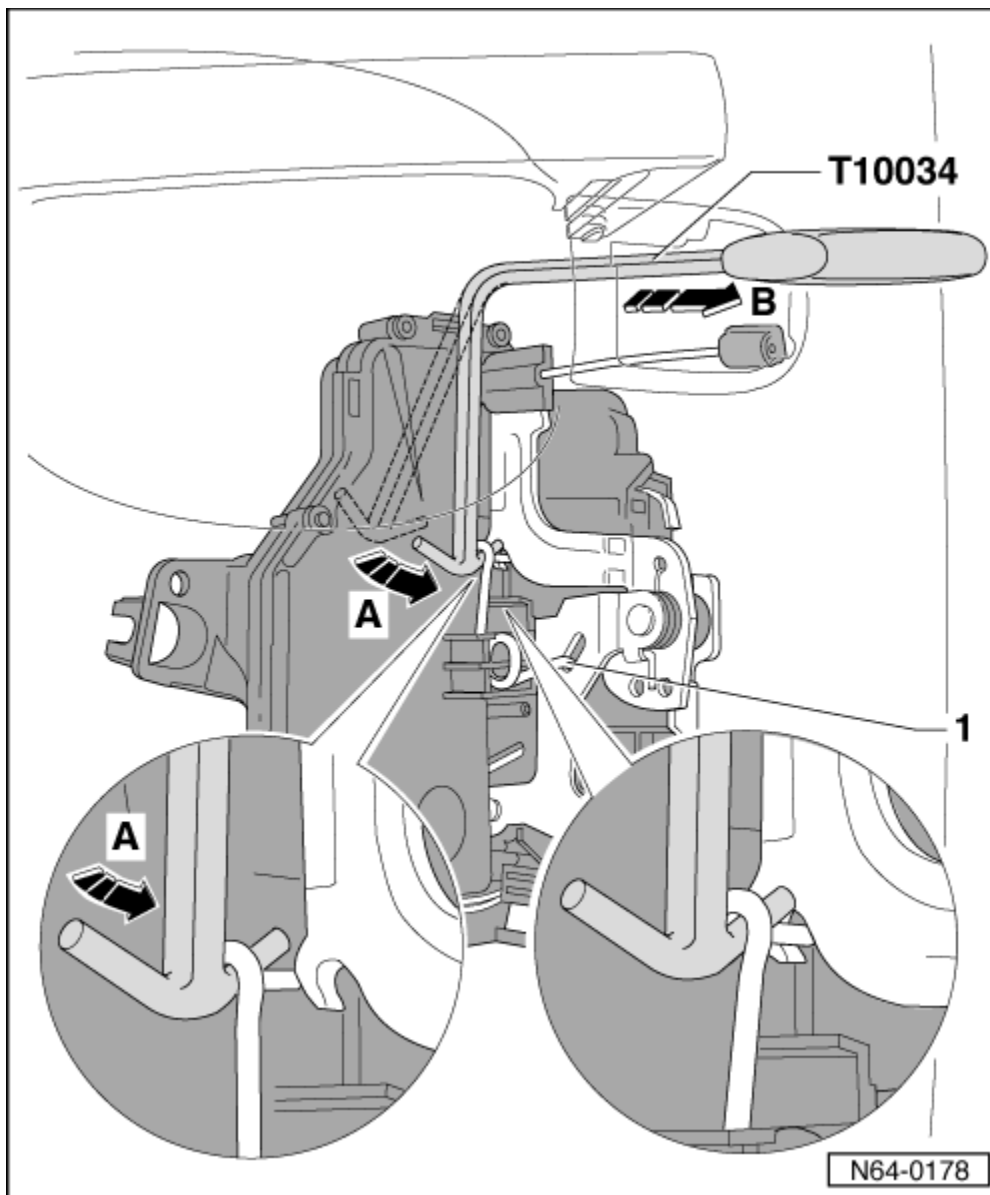

- Guide Assembly tool -T10034- into door through opening in inner door plate.
- Light inner part of door using a flashlight for better view.
- Hook assembly tool into spring -1--arrow A-.
- Engage spring into door lock by pulling installation tool -arrow B-.
- Install door handle into door.
- Insert clip -1- into metal cut out and engage into door handle -2-.
- Insert lock cylinder housing at right angle into door handle mounting bracket.
- Now screw in bolt into mounting bracket using torque wrench.

Door handle engages again into lock cylinder housing with a very audible click.



#### Note

During installation, door handle -2- must be pressed onto door plate.

– Then, perform in reverse order of removal.

Then a function test must be performed,  
1 since door cannot be opened if adjustment  
and clips of release cable are not correct.

