

## Door Window, Installing on Window Regulator



### Note

Spreader plug and spreader pin must always be replaced when performing installation work at door window.

- Window must be checked for damage before inserting spreader plug and spreader pin.

- With window removed, insert spreader plug -2- centered.
- Press in spreader pin -1- flush into spreader plug -2-.
- Guide door window into door.
- Insert door window -3- into slit of window regulator guide -4-.
- Using light pressure from above, lock window into window regulator -arrow-.

