

A16	ABS control module
H29	ABS warning lamp
A63	AC control module
S292	AC/heater function control panel
H98	Airbag warning lamp
G1	Alternator
H1	Alternator warning lamp
H158	Ambient light/rain sensor warning lamp
31	Battery -
30	Battery +
S23	Bonnet switch
H54	Boot lid/tailgate warning lamp
H18	Brake fluid level warning lamp
S33	Brake fluid level warning lamp switch
B12	Brake pad wear sensor, left front
H28	Brake pad wear warning lamp
A223	Clock signal receiver
S6	Combination switch
CAN-H	Controller area network (data bus) high
CAN-L	Controller area network (data bus) low
H70	Cruise control indicator lamp
X1	Data link connector (DLC)
A130	Diagnostic module
H139	Diesel particulate filter (DPF) warning lamp
A161-I	Digital multifunction display 1
A161-II	Digital multifunction display 2
A161-III	Digital multifunction display 3
S4	Dip/main/flash switch
A195	Door function control module, driver
A213	Door function control module, left rear
A196	Door function control module, passenger
A214	Door function control module, right rear
H52	Door open warning lamp, left or single
EP1	Earth point 1
EP11	Earth point 11
EP15	Earth point 15
EP5	Earth point 5
H121	Electronic stability program (ESP) warning lamp
A35	Engine control module (ECM)
H22	Engine coolant 'hot' warning lamp
H36	Engine coolant 'low' warning lamp
S50	Engine coolant 'low' warning lamp switch
P4	Engine coolant temperature (ECT) gauge
H63	Engine malfunction indicator lamp (MIL)
H37	Engine oil level warning lamp
H5	Engine oil pressure warning lamp
S25	Engine oil pressure warning lamp switch
B206	Engine oil quality sensor
S31	Fog lamp switch
A106	Four wheel drive control module
P3	Fuel gauge
B3	Fuel gauge tank sensor

B3-I	Fuel gauge tank sensor 1
B3-II	Fuel gauge tank sensor 2
H15	Fuel 'low' warning lamp
M12	Fuel pump (FP)
A107	Fuel pump control module
F	Fuse
X28-Ia	Fuse box/relay plate, engine bay 1 - type 1
X28-Ib	Fuse box/relay plate, engine bay 1 - type 2
H25	Glow plug warning lamp
H17	Handbrake ON warning lamp
S27	Hazard warning lamps switch
H151	Headlamp adjustment warning lamp
H157	Headlamp direction warning lamp
H2	Headlamp high beam warning lamp
A191	Headlamp level control module
S3	Headlamp switch
15	Ignition switch - ignition ON
A162	Immobilizer control module
B184	Immobilizer read coil
S5	Indicator switch
H6	Indicator warning lamp, left or single
H7	Indicator warning lamp, right
R4	Instrument illumination rheostat
A5	Instrument panel
A75	Instrumentation control module
A11	Multifunction control module
A11-I	Multifunction control module 1
A11-II	Multifunction control module 2
B61	Outside air temperature sensor
A81	Power steering control module
H106	Power steering warning lamp
S32	Rear fog lamp switch
H32	Seat belt warning lamp
A236	Steering column function control module
A198	Supplementary restraint system (SRS) control module
P7	Tachometer
H24	Trailer warning lamp
A57	Transmission control module (TCM)
A14	Transmission shift control module
H115	Tyre pressure warning lamp
P9	Vehicle speedometer
S136	Windscreen washer fluid 'low' warning lamp switch

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.



