


Audi A3

Current Flow Diagram

No. 1 / 36

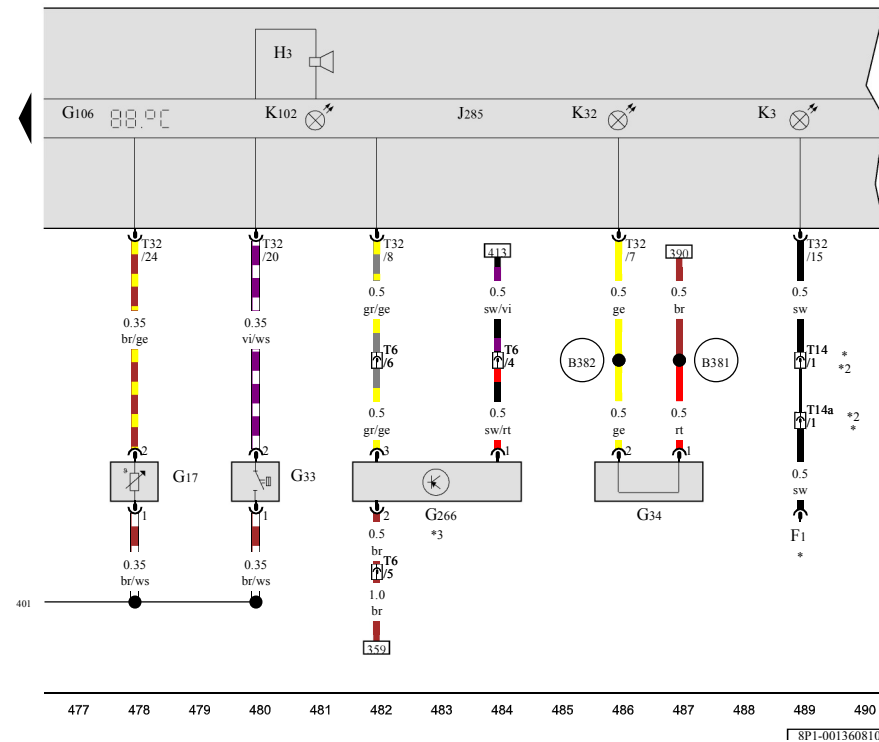

Oil pressure switch, Ambient temperature sensor, Windscreen washer fluid level sender, Front left brake pad wear sender, Oil level and oil temperature sender, Control unit in dash panel insert

- F1 - Oil pressure switch
- G17 - Ambient temperature sensor
- G33 - Windscreen washer fluid level sender
- G34 - Front left brake pad wear sender
- G106 - Ambient temperature indicator
- G266 - Oil level and oil temperature sender
- H3 - Buzzer and gong
- J285 - Control unit in dash panel insert
- K3 - Oil pressure warning lamp
- K32 - Brake pad warning lamp
- K102 - Rear lid closed warning lamp,
- T6 - 6-pin connector, near front left longitudinal member
- T14 - 14-pin connector, near front left longitudinal member
- T14a - 14-pin connector, near E-box
- T32 - 32-pin connector
- 401 - Earth connection (sender earth), in interior wiring harness
- B381 - Connection 3 (brake pad wear indicator), in main wiring harness
- B382 - Connection 4 (brake pad wear indicator), in main wiring harness
- * - see applicable current flow diagram for engine
- *2 - If fitted
- *3 - Only models with extended servicing intervals (ESI)